

Arch Instructions

Using the packing list, verify that you have all of the pieces listed and that none are damaged.


Start by screwing the two side panels to a face. Do not completely tighten the screws, allowing for some wiggle of the panels.

Repeat with the other face, again leaving some wiggle.


Slide the tambor into the groove in the facing panels.

Once the tambor is in place, finish tighten the screws, taking care not to strip the heads or damage the panel.


**Questions? Problems?
Call 888.687.2517**

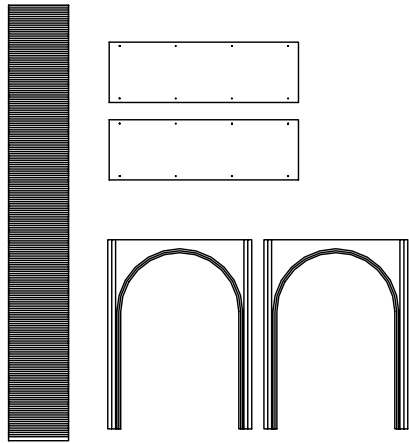


STEP 1.
UNPACK & VERIFY

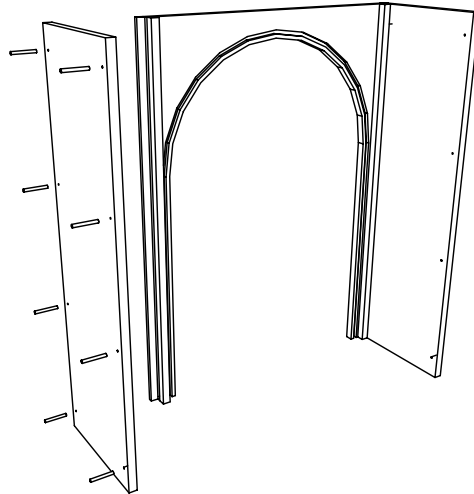

STEP 2.
ATTACH SIDES & FACES

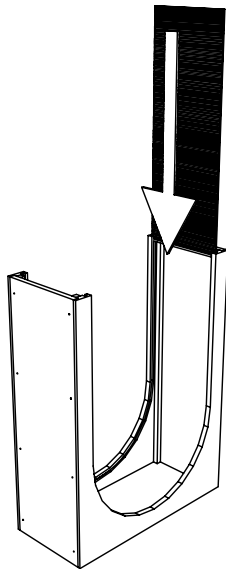

STEP 3.
ATTACH TAMBOR

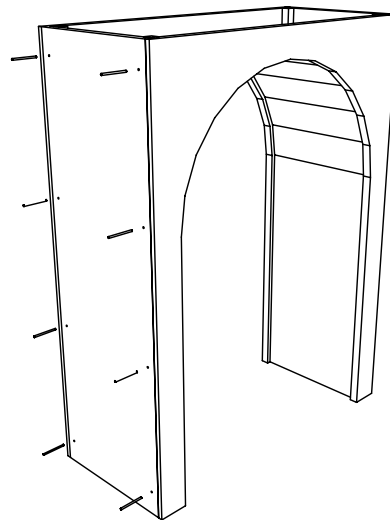

STEP 4.
FINISH TIGHTEN SCREWS