

WineRacks.com

Phone  
888.687.2517  
Fax  
845.658.5309

# ASSEMBLY INSTRUCTIONS INDIVIDUAL BOTTLE RACKING


Individual Curved Corner Kit Assembly Instructions

DWG. 10002

Note: Custom racks are to be nailed together instead of screws unless otherwise specified. 1 1/4" to 1 3/8" long 18ga. brad nails to be supplied by customer. Use of a nail gun is recommended.


Assemble the rack upright by attaching one of the long curved spacer bars in roughly the middle of 2 rails. Place the spacer bar in front of a middle row of bottle supports, with the bottle supports facing in.

1

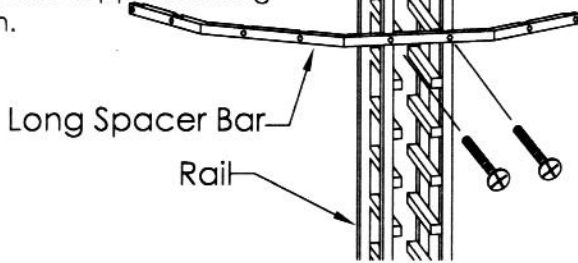


2

Assemble the back of the rack by attaching the remaining rails to this spacer bar. Be sure to have the bottle supports facing in toward each other along each straight piece of the spacer bar.

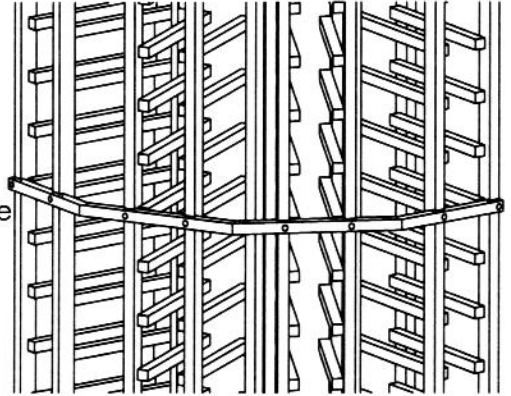


Attach another long spacer bar to the top of the rack, again directly in front of the top row of bottle supports.

3

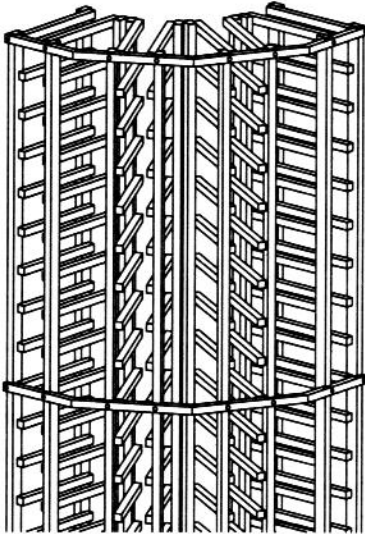


4

Attach the remaining long spacer bars to the back of the rack directly in front of the bottom row of bottle supports and additional middle supports (if needed).

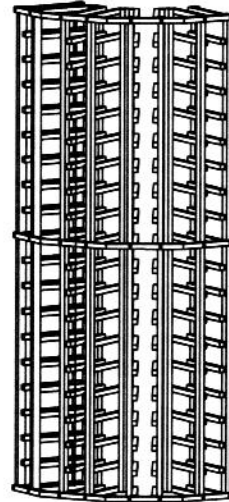


5

Attach a short curved spacer bar to front of the rack directly across from the middle space bar.

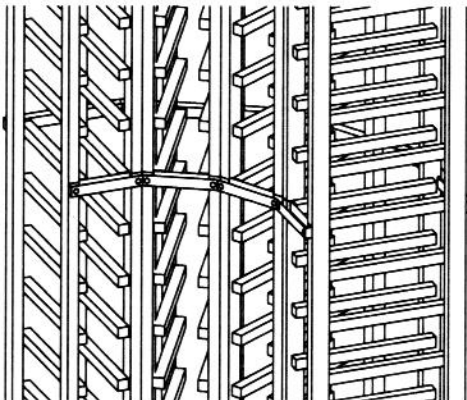

6

Attach the remaining short curved spacer bars to the front of the rack directly across from the back spacer bars.

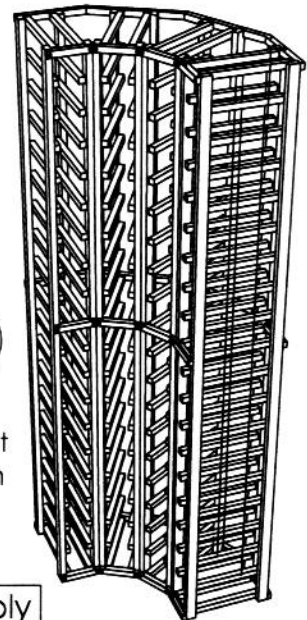

Finished Assembly