



ASSEMBLY INSTRUCTIONS CELLAR RACKING


DWG. 10005

126 Individual Racking Assembly Instructions

Note: Custom racks are to be nailed together instead of screws unless otherwise specified. 1 1/4" to 1 1/2" long 18ga. brad nails to be supplied by customer. Use of a nail gun is recommended.


Assemble the rack on the floor by attaching one of the spacer bars flush with the top of one of the inside rails. (Inside rails have bottle supports on both sides)

1

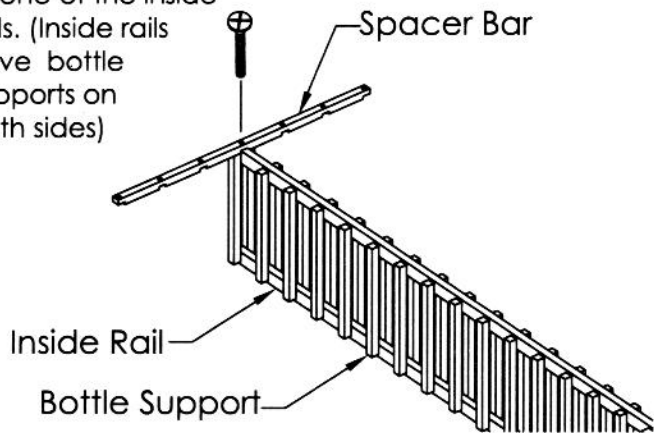


2

Assemble this side of the rack by attaching the remaining rails flush with the top of this spacer bar. Be sure to attach the (2) side rails with the bottle supports facing in toward each other.

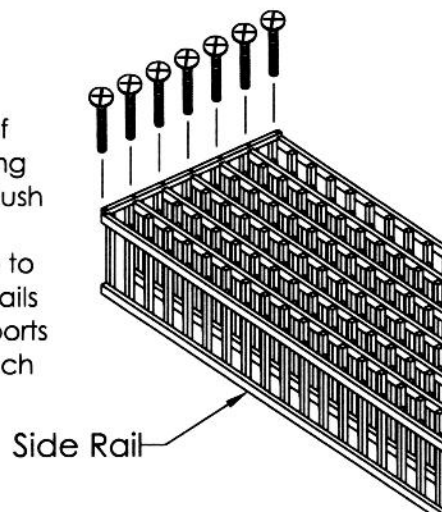


3

Attach half of the spacer bars to this side of the rack. Spacer bars should be put in place about 8-10 bottle supports. Be sure to attach them flush in front of the bottle supports.

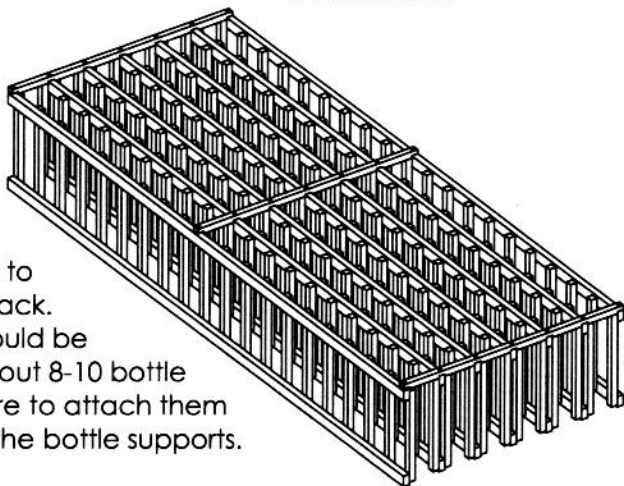


4

Turn the rack over and attach the remaining spacer bars to the rack directly across from the rear spacer bars. Be sure to attach them flush with the bottle supports.

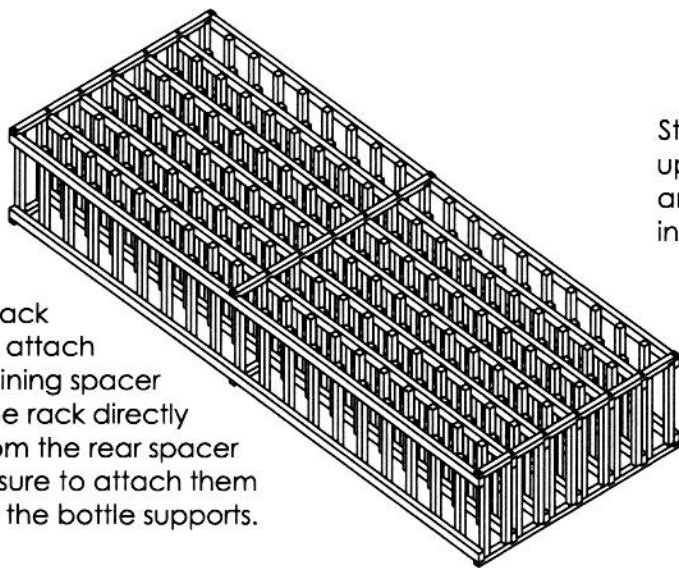

5

Stand rack upright and set in place.

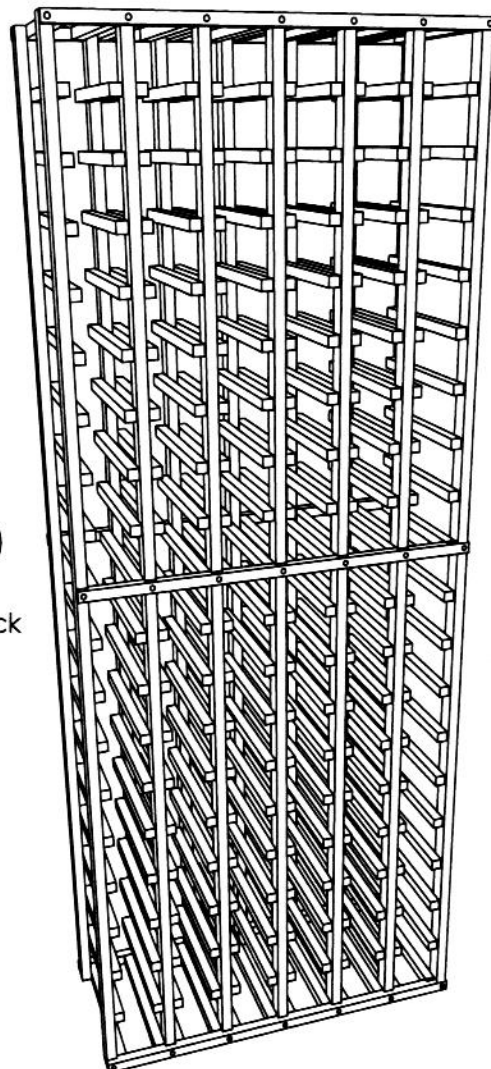

Finished Assembly